



Ricochet Racers™ INSTRUCTIONS

Zing! Lightning race cars sleeked like bullets, bursting from the barrel of a dynamic rifle, plus that big Ricochet sound . . . get set for hours of thrilling excitement! The rifle is sensational in all-American colors. The streamlined race cars are uniquely designed for speed and competition . . . you'll want to collect the entire racing fleet . . .

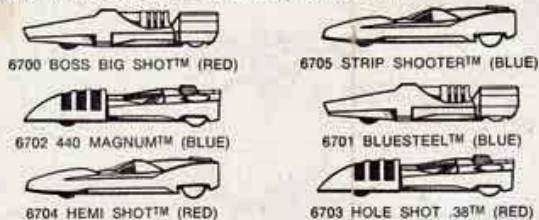


Before you start racing be sure to read these instructions carefully. First familiarize yourself with the different parts of your Ricochet Rifle . . .

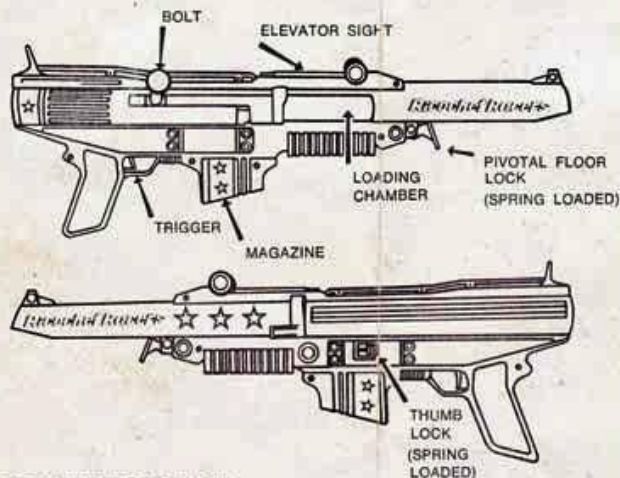

EXCLUSIVE FEATURES

Ricochet Racers have been designed with three special features. The front pivotal lock prevents the rifle from being activated unless it rests on the floor. The front thumb lock too, must be placed in position before the trigger will operate. The loading chamber of your Ricochet Rifle has been designed so that the only object that can be launched from the rifle is a Ricochet Racer.

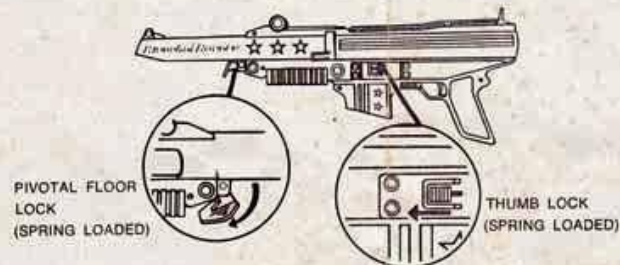


RIFLE LABELS

Before you start racing you will want to decorate your rifle with the red, white and blue labels included. It's a good idea to ask an adult or older brother or sister to help you apply them. Peel each label carefully from the sheet. *Since you will be unable to lift the label after it has been applied, make absolutely sure it's positioned properly before you smooth out the bubbles and wrinkles with your fingers.*

Apply the labels to your rifle as illustrated. Extra stars have been included on the label sheet, in case you decide you want to decorate other parts of your rifle, too.



MAKE SURE THE LABEL IS POSITIONED PROPERLY BEFORE RUBBING IT DOWN.

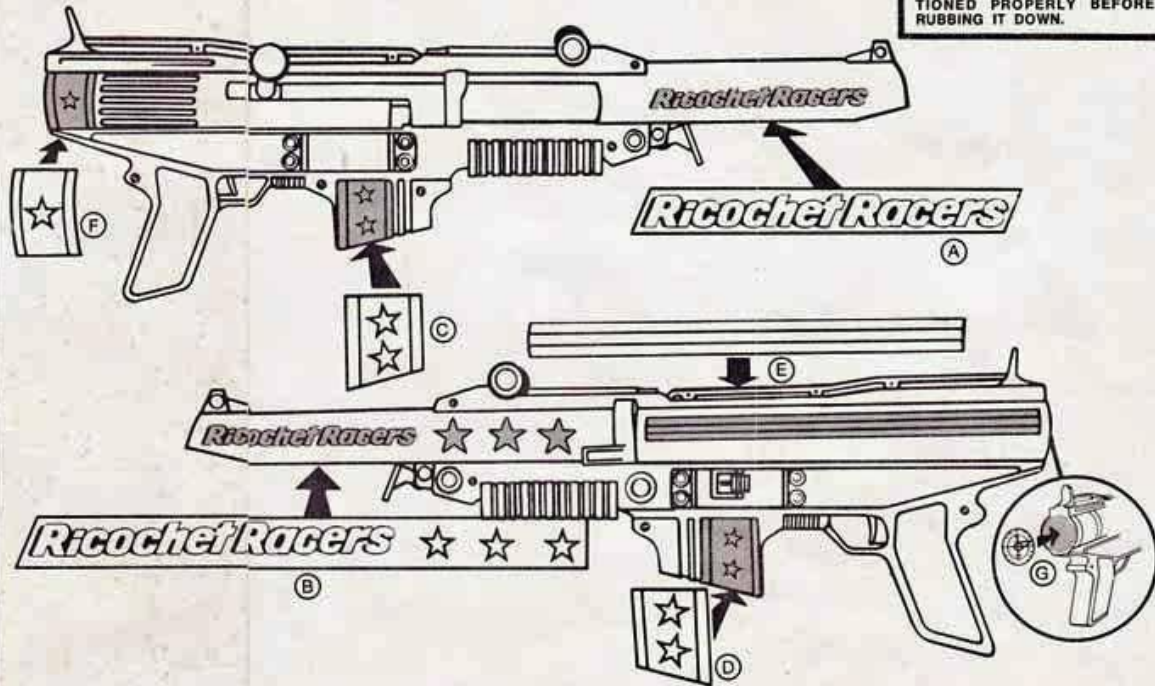

THE CARTRIDGE BELT

When you're not racing your Ricochet Racers, place them firmly (along with their cartridges) nose down into the cartridge belt. Your cartridge belt is a convenient place to keep your racing cars when they're not in use.


CARTRIDGE BELT LABELS

The cartridge belt in your set has been designed to clip over any belt or waistband. Decorate your cartridge belt with the star labels included, as illustrated.

CAR DECALS

Automotive decals have been included so that you can give your Ricochet Racer a custom look.


First carefully cut apart the decals on the sheet with scissors. Dip each decal in a small container of water. Lay out the decal on a dry surface for a minute. Each decal will slide off the paper easily. Position them on your racer, one at a time, then smooth out the wrinkles and air bubbles. Let dry.

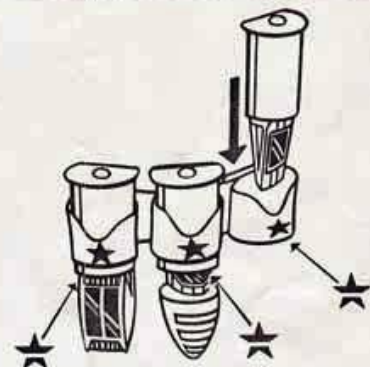


HOW TO OPERATE YOUR RICOCHET RIFLE

Ricochet Racers have been designed to be played with on a flat surface carpet, tile floors, driveways, sidewalks or concrete basements. Follow these instructions for hours of fun!


- 1** Push the race car, rear portion first, into the cartridge until it snaps firmly into place.

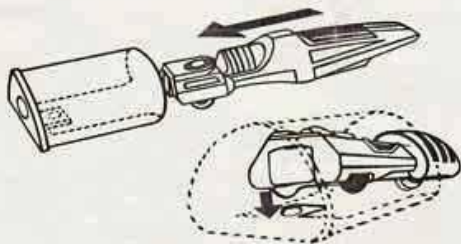


- 2** Raise the bolt of the rifle upwards, then pull it all the way back to the rear of the rifle to open the loading chamber.

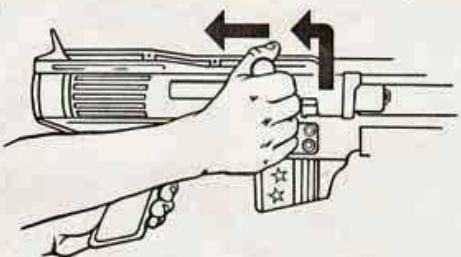

- 3** Load racer and cartridge into the loading chamber, nose first, pushing them all the way forward and into position.

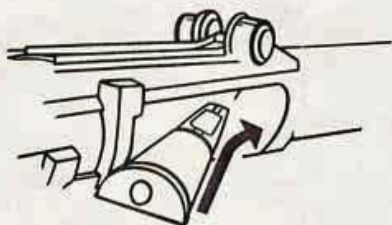

- 4** Push the bolt forward, then down again until it locks firmly into place.

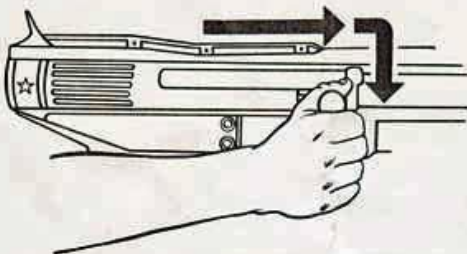

- 5** To race your Ricochet Racers, get into a kneeling position or lie down on the floor. Rotate the front pivotal floor lock until it rests flat on the floor, then adjust the elevator sight to the correct aiming position.




- 6** With your left hand, push the thumb lock into a forward position. While holding it in this position, place your right index finger on the trigger.



- 7** Aim your rifle in the direction you want your racer to travel. Pull the trigger, and let 'er ro!



- 8** To remove the cartridge, raise the bolt of the rifle and pull it towards the rear of the rifle. This will automatically eject the cartridge. Reload your racer and you're set to go again.

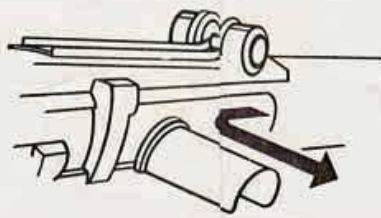


INSTRUCTIONS FOR SETS WITH TARGET SHOOTING EQUIPMENT

Before you start target shooting, you will want to decorate your targets with the labels included in your set, as illustrated.


SILVER DOLLAR TARGET

Set the silver dollar on its ramp, 7 to 10 feet away from your rifle. You can either aim for the silver dollar while it's standing still, or you may want to start it in a rocking motion from left to right, for the added fun of aiming at a moving target!

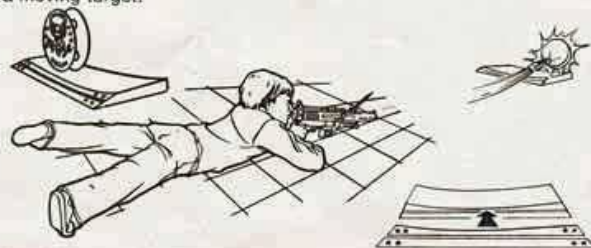


BARREL BUSTING

Stack your barrels on top of each other, forming a triangle. (Place three barrels in the first row, two in the second, one in the third row.) Aim your rifle at the barrels, pull the trigger, then watch those barrels fly!

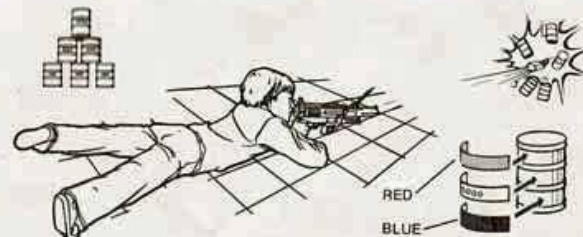

JUMP RAMPS

Position the ramps approximately 10 feet away for best results. You can arrange both jump ramps so that the two highest ends of each ramp face each other with a few inches between them as illustrated. When you launch your racer, it will speed up the first ramp, jump over, and race down the second ramp!

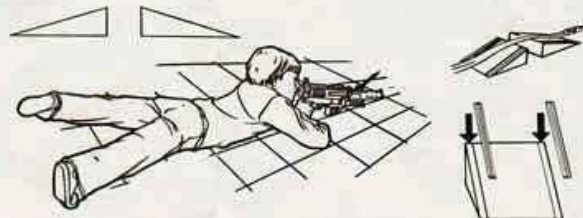

THE RICOCHET RACER SETS

MARKSMAN™ (#6720)	SHARPSHOOTER™ (#6725)	SUPER DUEL™ (#6730)	DOUBLE ACTION™ (#6740)
Includes:	Includes:	Includes:	Includes:
1 Ricochet Rifle	1 Ricochet Rifle	1 Ricochet Rifle	2 Ricochet Rifles
1 Race Car	1 Race Car	1 Race Car	4 Race Cars
1 Cartridge	1 Cartridge	1 Cartridge Belt	4 Cartridges
1 Cartridge Belt	1 Cartridge Belt	1 Cartridge Belt	2 Cartridge Belts
	1 Silver Dollar Target	6 Barrels	2 Jump Ramps
		2 Jump Ramps	6 Barrels
		1 Silver Dollar Target	1 Silver Dollar Target